


Connect to the DRV


- 1 Download the “SAGE by Armstrong” mobile app from either the Apple App Store or Google Play or scan this QR code shortcut.



- 2 Open up the ‘mobile application’ and follow the steps shown below:

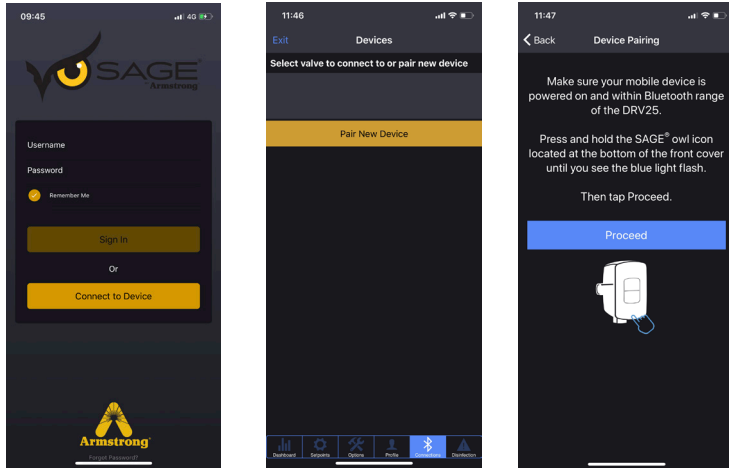

- 3 Follow the steps located in the full product manual (<https://armstrongdoesitagain.com/guide>) to finish the initial commissioning.

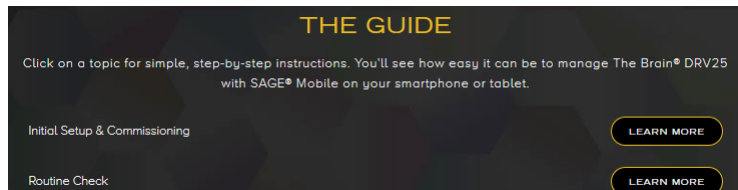

Warranty and Certifications

The Brain - Model DRV25 shall have a 5-year parts warranty on all components other than preventative maintenance service items mentioned in the IOM, which include batteries and all ‘wetted’ O-rings/ Seals




1374360-K2-A

Armstrong International
North America • Latin America • India • Europe / Middle East / Africa • China • Pacific Rim
armstronginternational.com

@ Kohler Mira Limited, March 2019

The Brain® DRV25 Digital Recirculation Valve




- Read this quick start guide before beginning.
- Applicable codes must be followed and supersede any other instructions. Generally applicable codes in the US include: IPC (International Plumbing Code).
- Improper installation or operation may cause a flood resulting in property damage, personal injury, or death. Armstrong strongly recommends that a qualified installer be used.
- Service must be performed by a qualified person.
- Improper installation, start-up, operation, maintenance, or service may void the warranty.
-  Hot water or metal may cause scald burns. Skin exposure to 140°F water or metal for only five seconds may cause a second degree burn.

Consult the full product manual located at <https://armstrongdoesitagain.com> before using the product.


Mechanical Quick Start

Make sure that all operating conditions are within the product specification limit located in the full product manual.

1 Prepare the DRV to be installed by taking it out of the packaging and installing the appropriate inlet/outlet adapters, if required. Flush all pipework thoroughly.

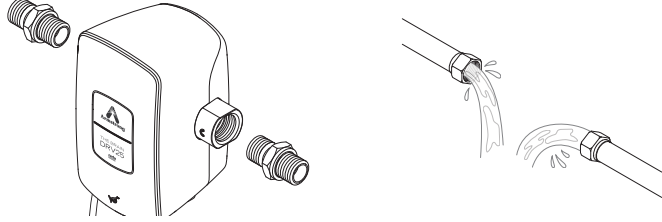


2 Connect the DRV to the pipework making sure that the check valves, strainers and isolation valves are fitted as per example illustrated below.

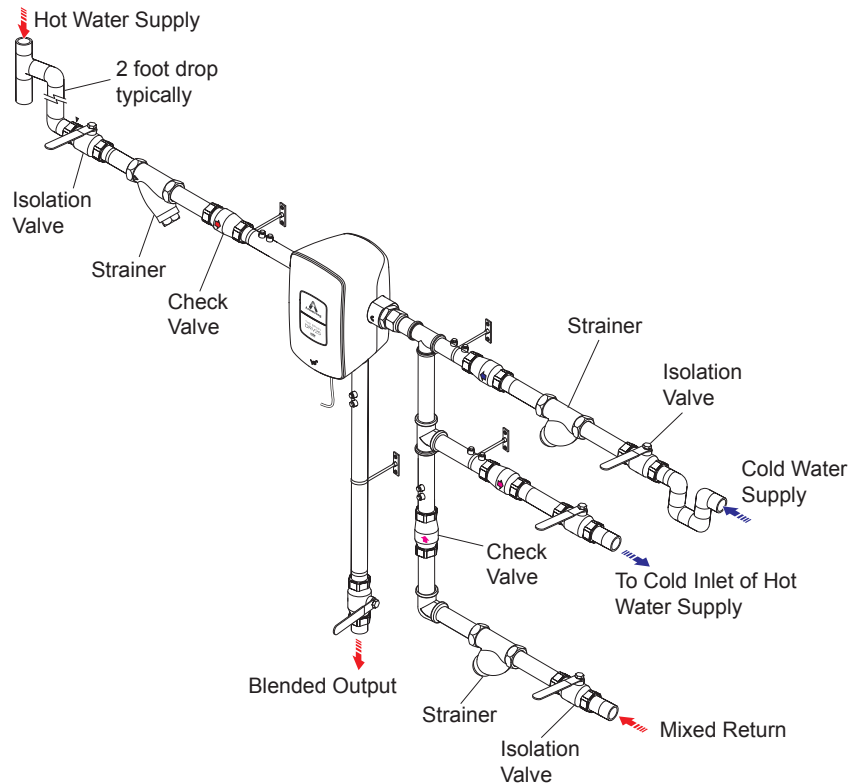

3

Make sure that each pipe is connected in the correct location in the system and in the proper orientation.

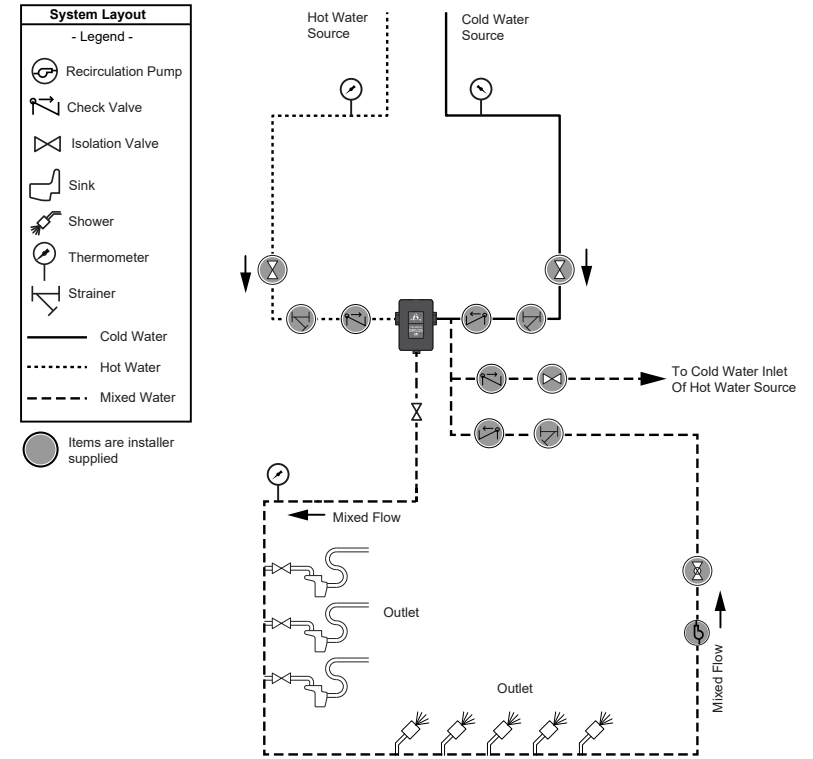

Electrical Quick Start

1 Plug the DRV into an approved circuit as shown below.

2 Turn power on and ensure the LED on the front cover cycles through the initial power up sequence.

