

## AHWG TSB#6– SAGE™ BAS Access

**Product:** SAGE™ BS

**Technical Assessment Reference:** N/A

**Topic/Problem Replacement & Resolution:** Connecting the SAGE™ BS to Local BAS

SAGE™ BS utilizes a common used BAS gateway module manufactured by FieldServer called a ProtoCessor. There are 3 different ProtoCessor versions (BacNet, BacNet Metasys N2, Lonworks) available that are chosen upon order/specification based on the specific site conditions.

The instruction packet located on the SAGE™ BS landing page of our website ([ProtoCessor Setup](#)) contains all of the necessary files, manuals, and documents that will aid and guide in connecting to the ProtoCessor (*see Figure 1*) in order to be able to change settings specific to the site BAS network.

**Tools Required:**


- Ethernet Cable
- Computer with Admin access (Windows 7 Operating System)

**Replacement Process/Steps:**

1. Obtain the ‘ProtoCessor Setup’ zipped file from the website located here (*see Figure 2*):
  - a. [ProtoCessor Setup](#)
  - b. Ensure that all files from the zipped file are extracted and saved in an accessible location (i.e. your desktop)
2. Ensure not currently connected to internet before proceeding (local area or wireless)
3. Follow the instructions in the document ‘SAGE™ BS ProtoCessor Configuratin Toolbox’ within the ProtoCessor Setup file



**Figure 1: ProtoCessor Module**

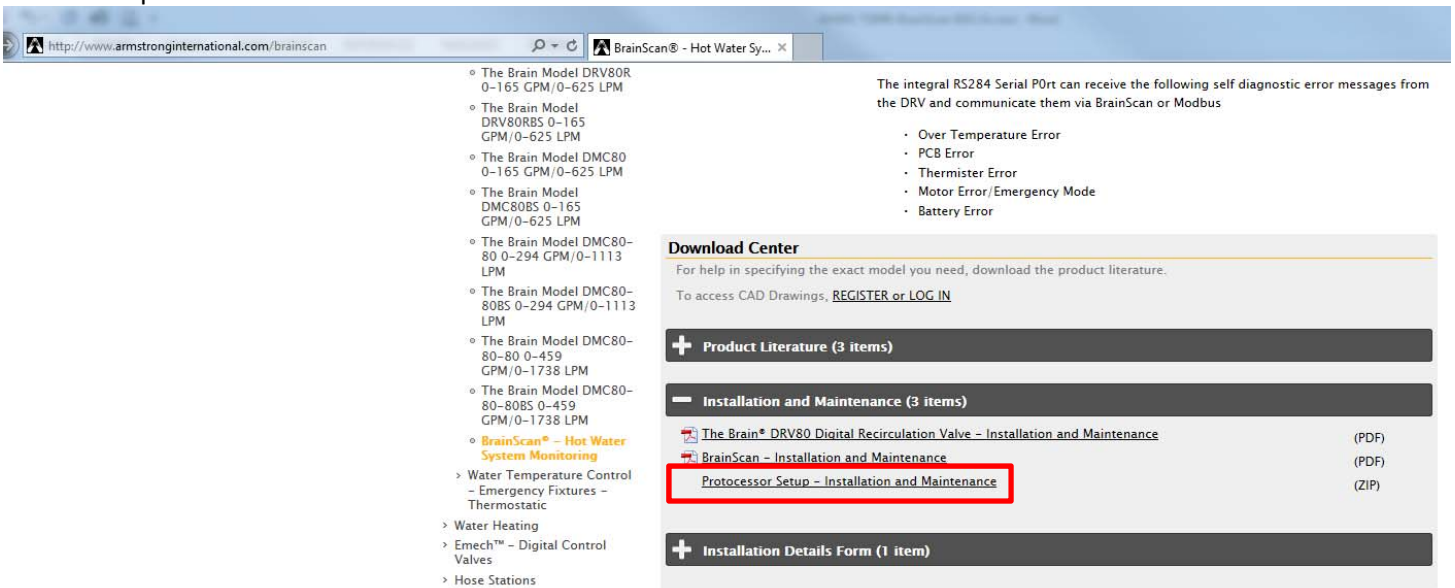

**Figure 2: SAGE™ BS Website Landing Page**